



LV121 / LV122 LOUVRE ASSEMBLY DETAILS

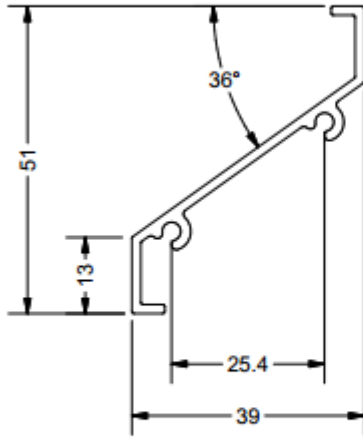

Free Air Flow % = Minimum Throat / Pitch x 100

@ 40mm Centres
 $19 / 40 \times 100 = 48\%$ Approx Free Air Flow

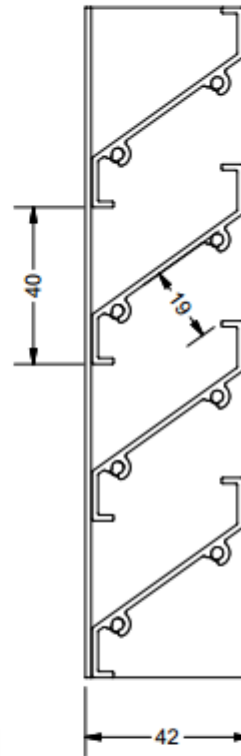

Note:

1. Recommended maximum unsupported span 800mm
2. For panels longer than 800mm, stiffening channels must be added at 600mm maximum centres, to reduce sagging and blade flutter under high wind load conditions

